


# Installing RP Contactor

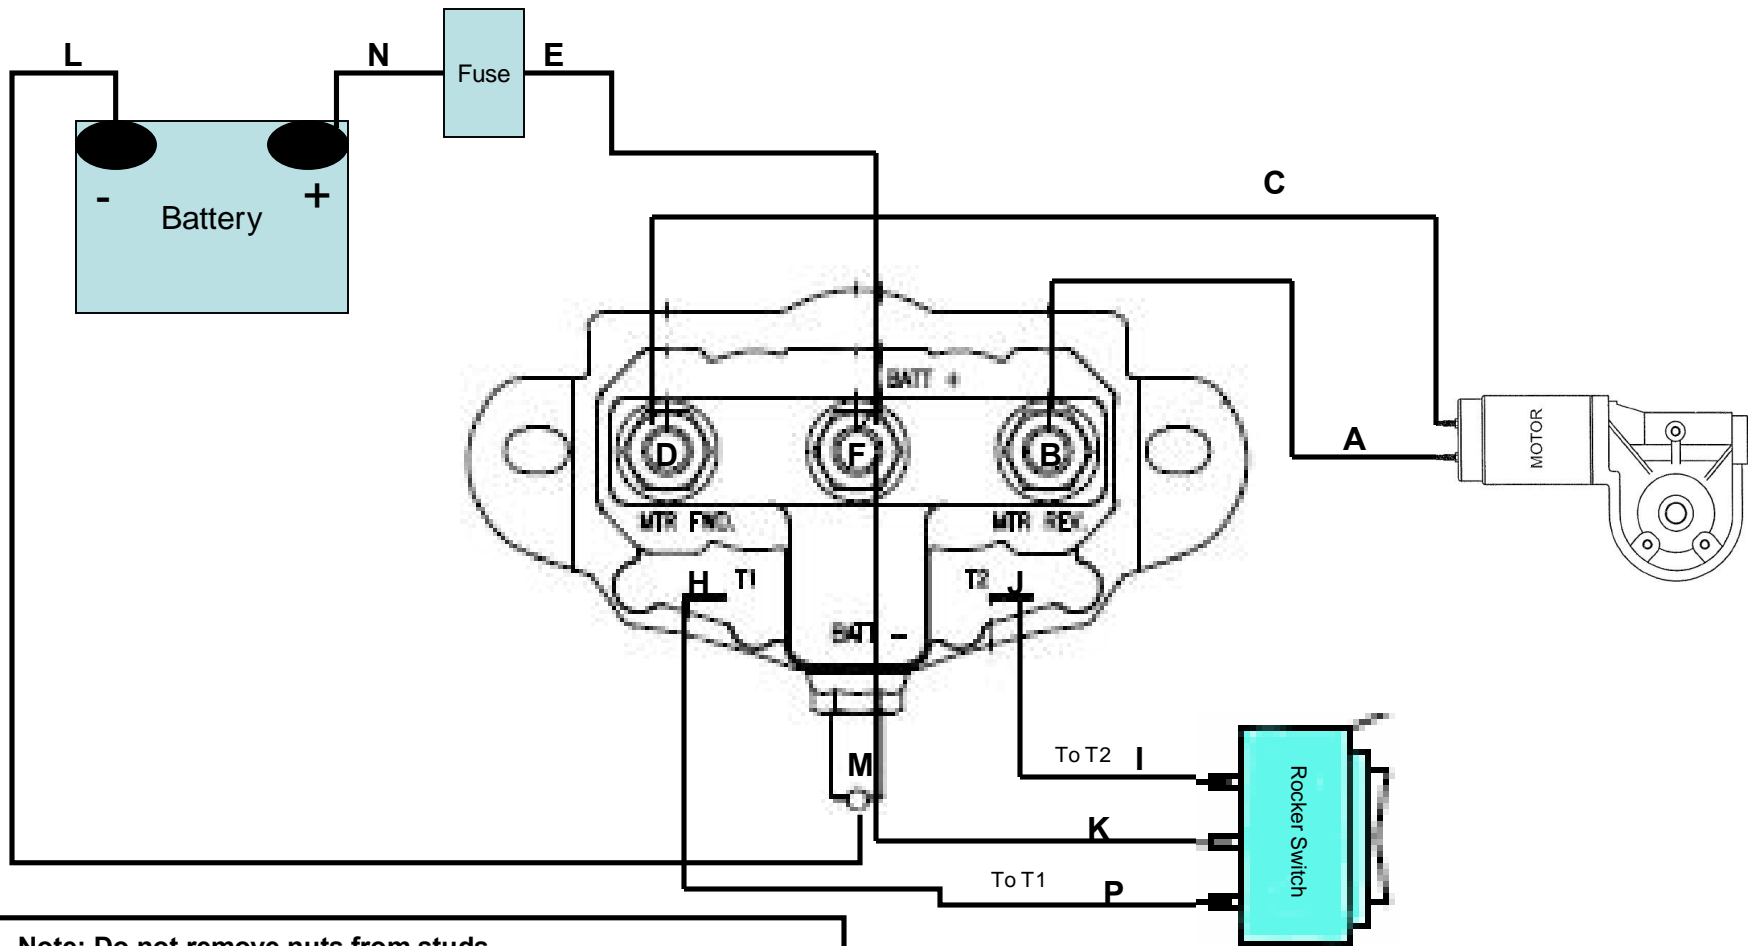

**Note: Do not remove nuts from studs  
Do not bend spade**

## Mounting Instructions

1. Select a desired mounting location
2. Using the contactor as a template, mark the centers of the mounting holes. Use the widest spacing possible which will give you 4 1/4" spacing on center.
3. Using a 1/4" drill bit, drill the holes marked in the previous step.
4. Mount the contactor using 1/4" bolts and nuts. Make sure the bolt head is on the back side on the contactor.
5. Wire the relay according to the wiring diagram

## Wiring Diagram

1. Connect the motor (A) to motor reverse stud (B)
2. Connect permanent motor wire (C) to motor forward stud (D)
3. Connect Battery Positive (N) to Fuse
4. Connect wire (E) from fuse to Battery + stud (F)
5. Connect T1 Rock Switch (P) to T1 spade (H)
6. Connect T2 Rock Switch (I) to T2 spade (J)
7. Connect Rocker Wire (K) to Battery stud (F).
8. Connect Battery Negative (L) to Battery Negative stud (M)